Jan, 1997 AD-5

ACOUSTIC INSTRUMENT PROCESSOR

SERVICE NOTES

First Edition

Issued by RJA

TABLE OF CONTENTS	目次	Page
SPECIFICATIONS · · · · · · · · · · · · · · · · · · ·	···· 仕様 ·····	2
LOCATION OF CONTROLS	・・・・ パネル配置図 ・・・・・・	3
EXPLODED VIEW · · · · · · · · · · · · · · · · · · ·	···· 分解図 ·····	4
PARTS LIST · · · · · · · · · · · · · · · · · · ·	・・・・ パーツリスト・・・・・・	5
TEST MODE · · · · · · · · · · · · · · · · · · ·	・・・・ テストモード・・・・・・	6 ~ 8
ERROR MESSAGES · · · · · · · · · · · · · · · · · · ·	・・・・ エラーメッセージ・・・・	9
IC DATA · · · · · · · · · · · · · · · · · ·	···· ICデータ ·····	
PWB	···· 基板図·····	11、13
CIRCUIT DIAGRAM·····	···· 回路図·····	12、14



Copyright © 1997 by ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

本書の一部、もしくは全部を無断で複写・転載することを禁じます。

SPECIFICATIONS/仕様

AD-5: ACOUSTIC INSTRUMENT PROCESSOR

○AD Conversion/AD変換 · · · · · · · · · · · · · · · · · · ·	·: 21 bit AF Method
---	---------------------

 \bigcirc DA Conversion/DA変換 · · · · · · · · · : 20-bit Input, 4 Times Oversampling Digital Filter + $\Delta\Sigma$ Method

◎Sampling Frequency/サンプリング周波数 ·····: 44.1 kHz

◎Nominal Input Level/規定入力レベル・・・・・・・:INPUT: -10 dBm

INSERT(RETURN): -10 dBm

◎Input Impedance/入力インピーダンス ······: INPUT (PIEZO): 4.7 Mohm

INPUT (MAGNETIC): 1 Mohm INSERT (RETURN): 100 kohm

OUTPUT (Balanced): -10 dBm into 600 ohm

INSERT (SEND): -10 dBm

◎Output Impedance/出力インピーダンス ········:OUTPUT: 2 kohm

OUTPUT (Balanced): 600 ohm INSERT (SEND): 1 kohm

◎Controls/コントロール · · · · · · · · · · · · : [INPUT LEVEL] PIEZO Knob,MAGNETIC Knob,Phase Switch

[PREAMP] LEVEL Knob, BASS Knob, MIDDLE Knob, TREBLE Knob, PRESENCE Knob

[ANTI FEEDBACK] DEPTH Knob,FREQUENCY Knob [ACOUSTIC] BODY Knob,MIC DISTANCE Knob

2x2 CHORUS Knob, REVERB Knob

POWER Switch, BALANCED OUTPUT Switch, EFFECTS BYPASS Button

◎Indicators/インジケータ ·········: POWER,PEAK,EFFECTS BYPASS,2x2 CHORUS,REVERB

◎Connectors/接続端子···········: INPUT Jacks (PIEZO, MAGNETIC)

INSERT Jack (1/4 inch TRS Phone Type)

OUTPUT Jacks L(MONO),R

OUTPUT Connectors L,R(XLR-3-32 Type)

REMOTE Jack AC Adaptor Jack

◎Power Supply/電源 · · · · · · · · · · · · · · · DC 9V (Roland ACI or ACB-Series)

◎Current Draw/消費電流 · · · · · · · · : 300 mA

◎**Dimensions/**外形寸法··········: 150(W) x 155(D) x 65(H) mm

5-15/16(W) x 6-1/8(D) x 2-9/16(H) inches

◎Weight/重量 · · · · · · · · · : 1.0 kg (excluding the AC Adaptor)

2 lbs 4 oz

◎Accessories/付属品 ················:Owner's Manual Japanese (70901723)

English (70901823)

AC Adaptor

ACI-100C (00905756) ACI-120C (00905767)

ACI-230C (01018312) ACB-240(E) (12449564) ACB-240(A) (12449549)


Cord:

Roland PCS-31 (1/4 inch TRS Phone Type - 1/4 inch Phone Typex2)

^{* 0} dBm = 0.775 Vrms


Jan, 1997


LOCATION OF CONTROLS/パネル配置図

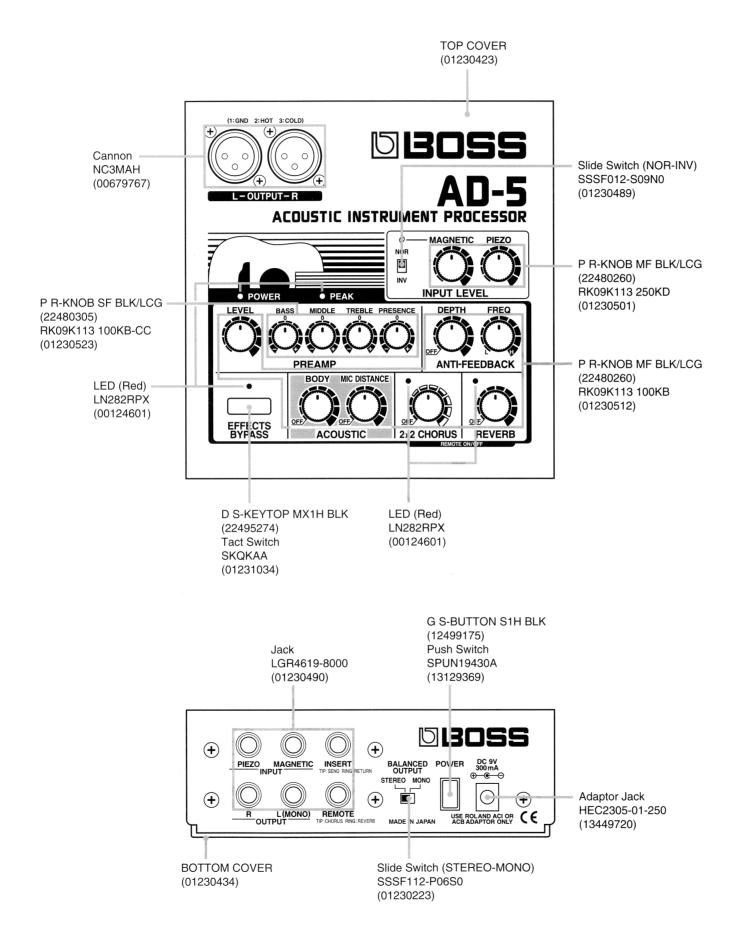

Jan, 1997 AD-5

EXPLODED VIEW/分解図

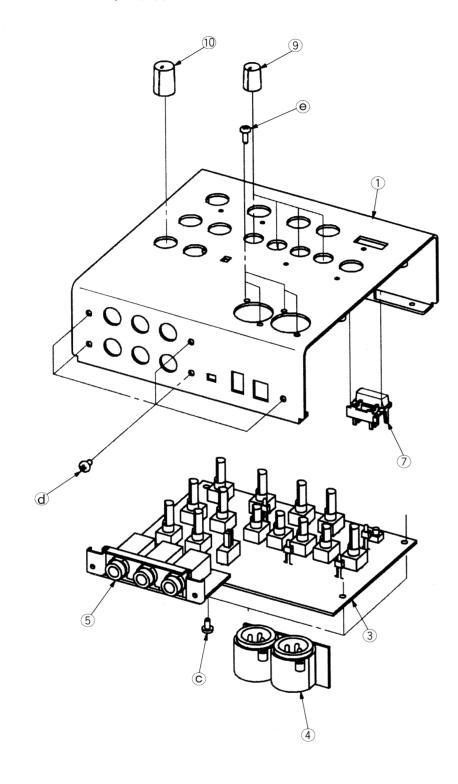

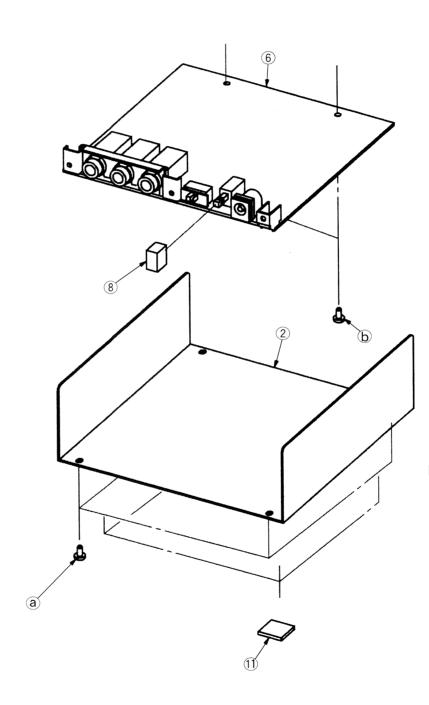

[PARTS] No. PART No.

NO.	PARI NO.	PAI		
1	01230423	TOI		
2	01230434	BO		
3	******	VR		
4	******	OU		
(5)	******	IN J		
6	70901667	MA		
7	22495274	D S		
8	12499175	G S		
9	22480305	PΒ		
10	22480260	PR		
11	22350313	AM		
[SCREW]				

No.	PART No.
a	40011390
b	40012512
©	40013056
(d)	40010412
e	40011312

PART NAME
TOP COVER
BOTTOM COVER
VR BOARD ASSY
OUT JK BOARD ASSY
IN JK BOARD ASSY
MAIN BOARD ASSY
S-KEYTOP MX1H BLK
S-BUTTON S1H BLK
R-KNOB SF BLK/LCG
R-KNOB MF BLK/LCG R-KNOB MF BLK/LCG MDEK FOOT MKS

PART NAME
Binding Taptite S W/INT TW 3x6 S BZC
Binding Taptite S 3x6 ZC
Pan Machine Screw W/SW+PW ∮ 6 M3x6 ZC
Binding Machine Screw W/INT TW 3x6 BZC
Binding Taptite P 2.6x8 BZC

AD-5 Jan. 1997

PARTS LIST/パーツリスト

SAFETY PRECAUTIONS

The parts marked \triangle have safety-related characteristics Use only listed parts for

安全上の注意

replacement

△が付いている部品は、安全上 特別な規格でつくられたもので

交換の際は、注意をよく読み、 指定された部品番号以外の部品 は使わないようにして下さい。

CONSIDERATIONS ON PARTS ORDERING

When ordering any parts listed in the parts list, please specify the following items in the order sheet. PART NUMBER DESCRIPTION 10 22575241 Sharp Key Knob (orange) 2247017300 DAC-15D

Failure to completely fill the above items with correct number and description will result in delayed or even undelivered replacement.

パーツ発注に関するお願い

オーダーシートには、必ず下記の4項目は正確に記入して下さい。(例外は除く)

必要数 パーツナンバー 品名 使用機種 22575241 Sharp Key C-20/50 2247017300 DAC-15D Knob (orange) もし記入漏れ、誤記等が有る場合、必要部品が発送出来なかったり、大幅な遅れの原因になります。 御協力をお願いします。

SW1 on MB

L1 on MB

NOTE:The parts marked # are new.(initial parts) 注意:# が付いた部品は新規部品です。

MB->MAIN BOARD IB->IN JK BOARD

CASING/ケース

01230423 TOP COVER BOTTOM COVER 01230434 22350313 AMDEK FOOT MKS

BOTTOM COVER

CHASSIS/シャーシ

JACK HOLDER MB,IB 01230445 GROUNDING TERMINAL M1698 12199584 MB

PCB ASSY/基板完成品

E 70901667 MAIN BOARD ASSY

SUB SHEET ASSY 70904201

NOTE : Replacement SUB SHEET ASSY includes VR BOARD ASSY, IN JK BOARD ASSY and OUT JK BOARD ASSY.

Exchange VR BOARD, IN JK BOARD and OUT JK BOARD in the lump.

注意:補修用SUB SHEET ASSY(はVR BOARD ASSY、IN JK BOARD ASSY、OUT JK BOARD ASSYを含みます。 基板交換の際は、VR BOARDとIN JK BOARDとOUT JK BOARDを同時に交換して下さい。

KNOB BUTTON/ノブ、ボタン

P R-KNOB MF BLK/LCG INPUTx2(PIEZO,MAGNETIC),LEVEL,DEPTH, 22480260 FREQ,BODY,MIC DISTANCE,CHORUS,REVERB BASS,MIDDLE,TREBLE,PRESENCE 22480305 P B-KNOB SE BLK/LCG

22495274 12499175

ELC10B221

D S-KEYTOP MX1H BLK G S-BUTTON S1H BLK EFFECTS BYPASS **POWER**

SWITCH/スイッチ

SKQKAA SSSF112-P06S0 Tact SW Slide SW 01231034 SW301 on VB SW2 on MB 01230223 01230489 SSSF012-S09N0 Slide SW SW201 on VB

13129369 SPUN19430A JACK, SOCKET/ジャック、ソケット

LGR4619-8000 01230490 JK1-JK3 on IB.JK4-JK6 on MB

Push SW

NC3MAH HEC2305-01-250 JK7,JK8 on OB 13449720 AC Adaptor JK9 on MB

FILTER/フィルター

12449452 BLM41A800SPT EMI Filter(Chip) L2.L3 on MB EMI Filter(Chip) L4,L5,L7,L8 on MB BLM31B601SPT 12449426 12399506 BL03RN2-R62T2 EMI Filter L9-L11 on IB DSS310-91D223S-50ATL12-134 FL1 on MB EMI Filter

Choke Coil

13529246 RESONATOR/発振子

△ 00897190

CST8.00MTW Crystal X1 on MB SG-531PCV 67.7376MHZ 01129889 Oscillator X2 on MB

POTENTIOMETER/ボリューム

VR3.VR8-VR13 on VB RK09K113 100KB RK09K113 100KB-CC 01230512 VR4-VR7 on VB 01230523 01230501 RK09K113 250KD VR1.VR2 on VB

TRANSISTOR/トランジスター

Q15 on MB Q11-Q14 on MB 15329538 00344312 RN2301 Digital Tr.(Chip) 2SK184GR FET Q201,Q202 on VB Q501 on MB 15129179 2SC2458GR Tr. 2SC2459GR Q203 on VB 15319115 2SC4213-A Tr. Tr. Q1-Q6 on MB Q10 on MB

IC/集積回路

HD6433612H CPU Mask(Flat) IC9 on MB 01230467 TC170C140AF-003 SAA7367T IC12 on MB IC2 on MB ESP Chip(Flat) 00892556 AD Converter(Flat) 01230456 TDA1386T-T M51953AFP-600C DA Converter(Flat) IC3 on MB Reset IC(Flat) IC11 on MB 15289123 IC13 on MB IC301 on VB HM514800DJ6Z DRAM(SOJ) 15169569 TC74HC4053AF Analog Multiplexe IC1,IC5-IC7 on MB IC201,IC202 on VB M5218AFP-600E OP Amp(Flat) M5218AP OP Amp 15189251 IR3M03A TA78L05S 15199159 DC/DC Converte IC8 on MB IC4 on MB 15199225 Voltage Regurator

DIODE. LED/ダイオード、LED

199352 D5 on MB 15339119T0 Switching Diode(Chip) Diode Array(Chip) DA1,DA2 on MB 15339120T0 1SS302 01233301 BD9.1FSAB1-T1 Zener Diode D3 on MB SB07-03N-AA D1,D2 on MB Schottky Diode 00902978 LN282RPX LED(Red) D301-D305 on VB

RESISTOR/抵抗

RA1,RA2 on MB RA3 RA4 on MB 00126112 EXBV8V101JV Resistor Array(Chip) 15409113 FXBV8V103JV Resistor Array(Chip RR1220P-103-D 10K(D) Metal Film(Chip) R5,R8 on MB Metal Film(Chip) R85 on MB 15419702 RR1220P-102-D 1.0K(D) RR1220P-122-D 1.2K(D) Metal Film(Chip) R4 on MB 00897234 BR1220P-183-D 18K(D) Metal Film(Chip) Metal Film(Chip) R84 on MB 01236378 BSSX1/2 0 68 OHM J Metal Oxide 1/2W R81 on MB

WIRING. CABLE/ワイヤリング、ケーブル

FUJI CARD 20X70-A4.0BBR-P1.25-HBL8 CN3 on MB -> CN13 on VB 01230989 CN2 on MB -> CN12 on OB 01231023 WIRING 5P 01230990 WIRING 3P CN1 on MB -> CN11 on VB RIBON CABL 6X50-P2.0 CN4 on IB -> CN14 on VB 01233312

CONNECTOR/コネクター

CN3 on MB 13379154 IL-FPC-20ST-N CN13 on VB IL-S-3P-S2T2-EF CN1 on MB 13439330 CN12 on OB

SCREW/ネジ類

Pan Machine Screw W/SW+PW ϕ 6 M3x6 ZC VB->Top Cover 40013056 40010412 40011312 Binding Machine Screw W/INT TW 3x6 BZC Binding Taptite P 2.6x8 BZC Top Cover->MB,IB
Top Cover->OB Bottom Cover->Top Cover MB->Top Cover 40011390 Binding Taptite S W/INT TW 3x6 S BZC Binding Taptite S 3x6 ZC 40012512

PACKING CASE/梱包材

PACKING CASE 01230390 PAD SUB PAD 01230412

MISCELLANEOUS/その他

40124567 CAUTION SEAL FCC20x40

ADAPTOR PAD

ACCESSORIES/標準付属品

70901723 Owner's Manual (Japanese) Owner's Manual (English) 00905756 ACI-100C

ACI-120C 01018312 ACI-230C 12449549 ACB-240(A

AC Adaptor(100V) AC Adaptor(117V UL/CSA) AC Adaptor(230V DNSFI) AC Adaptor(240V A)

TEST MODE/テストモード

O Test Items

1 LED Check

2.EFFECTS BYPASS key and Remote Jack Check 3.VR Check(except INPUT LEVEL)

4.DSP Check

5. Output Frequency Response Check

6.Output Mute Check

7-1a.Residual Noise and Shock Noise Check(DSP Thru)

7-1b.AF-AD Check

7-2. INPUT LEVEL VR and Total Frequency Response Check(DSP Thru)

7-3.PHASE SW Check

7-4.PEAK LED Check

7-5.INSERT Jack Check

© Equipment Required

· Foot SW:FS-5U x2 or equivalent

· STEREO - MONO x2(Tip and Ring) Cord:PCS-31

or equivalent

· Multiple Jack:J-5 or equivalent

· Cannon Cable

· Opened Plug · Oscillator

· Oscilloscope

· Noise Meter

O NOTE:

Before starting the test, make the following settings.

1.Set the INPUT LEVEL's knobs(PIEZO and MAGNETIC) to the center

2.Set POLARITY SWs of two FS-5Us to the direction to the iack.

3.Connect the REMOTE jack and two FS-5Us by using the PCS-31.

O To Enter the Test Mode

At first, set the all knobs except the INPUT LEVEL's one to the minimum. While pressing the EFFECTS BYPASS key, turn the power on, so the POWER LED will be turned on.

O To Exit the Test Mode

Simply turn off the power.

1.LED Check

If you set the FREQ knob to the maximum, the test program will start and turn on and off the LEDs one by one in the order shown in Fig.1. Verify each LEDs light correctly. Set the FREQ knob to the minimum to proceed to the next step.

Press the EFFECTS BYPASS key to proceed to the step 5.

◎ テスト項目

1. LEDチェック

2.EFFECTS BYPASSキー、REMOTEジャックチェック 3.ボリュームチェック (INPUT LEVELを除く)

4.DSPチェック 5.出力f特チェック

6.出力ミュートチェック 7-1a.残留ノイズ、ショックノイズチェック(DSPスルー)

7-1b.AF-ADチェック

7-2.INPUT LEVELボリュームと回路全体のf特チェック (DSPスルー)

7-3.位相切り替えスイッチチェック

7-4.PEAK LEDチェック

7-5.INSERTジャックチェック

◎ 用意する物

・フットスイッチ:FS-5U 2台(または相当品)

・ステレオーモノラル×2 (チップ、リング) コー ド:PCS-31 (または相当品)

・マルチプルジャック:J-5 (または相当品)

・キャノンケーブル

・空プラグ

発振器

・オシロスコープ

・ノイズメーター

◎ 注意:

テストを行う前に、下記の設定をしておいて下さい。

1.INPUT LEVELのツマミ (PIEZOとMAGNETIC) を センターにセットして下さい。

2.2台のFS-5Uのポラリティスイッチをジャック側に 設定します。

3.REMOTEジャックと2台のFS-5UをPCS-31を使っ て接続して下さい。

◎ テスト・モードへの入り方

まずINPUT LEVEL以外の全てのツマミを最小にしま す。EFFECTS BYPASSキーを押しながら電源をオン にしてPOWER LEDを点灯させます。

◎ テスト・モードの抜け方

電源をオフにします。

1.LEDチェック

FREQツマミを最大にするとテストが始まります。 LEDが図1の順で1つずつ点灯、消灯するので、 各LEDが正常に点灯するか確認して下さい。FREQ ツマミを最小にすると、次のステップに進みます。 EFFECTS BYPASSキーを押すと、ステップ5に進 みます。

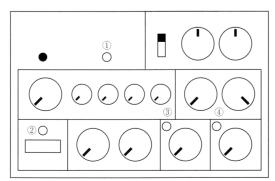


Fig.1./図1

2.EFFECTS BYPASS key and Remote Jack Check

Press the EFFECTS BYPASS key and verify that the EFFECTS BYPASS LED is turned on. Verify that the CHORUS LED or the REVERB LED is turned on by pressing the each FU-5U.

If you turn the LEVEL knob to the other direction except the minimum, the test proceed to the next step.

3.VR Check(except INPUT LEVEL)

Check the VRs one by one in the order shown in Fig.2. If you turn the VR from the minimum to the maximum clockwise, and counterclockwise, you can verify the several lighting patterns of the LEDs(CHORUS, REVERB and EFFECTS BYPASS) according to the VR direction. Shown in Table 1.

If you haven't finished to turn the VR to be tested exactly and turn the other one, the PEAK LED will blink. If all VR tests are finished, the EFFECTS BYPASS LED

will be turned on. Press the EFFECTS BYPASS key to proceed to the next 2.EFFECTS BYPASSキー、REMOTEジャックチェック EFFECTS BYPASSキーを押して、LEDが点灯する

ことを確認して下さい。 FS-5Uを踏んで、対応するLED (CHORUSまたは REVERB) が点灯することを確認して下さい。 LEVELツマミを最小以外に回すと、次のステップ

3.ボリュームチェック(INPUT LEVELを除く)

図2の順でボリュームのチェックを行います。ボ リュームを、最小から最大へ時計方向に、そして 半時計方向へと変化させると、表1のようにボリ ユームの向きに併せてLED (CHORUS, REVERB, EFFECTS BYPASS) によるいくつかの点灯パター ンが確認できます。

もし、テストするボリュームを正しく回さずに違 うボリュームを回すと、PEAK LEDが点滅します。 全てのボリュームがテストされると、EFFECTS BYPASS LEDが点灯します。

EFFECTS BYPASSキーを押すと、次のステップへ 進みます。

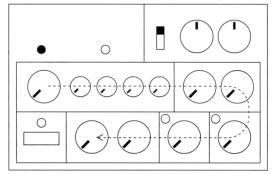


Fig.2./図2

VR	EFFECTS BYPASS LED	CHORUS LED	REVERB LED
Min.	_	_	Simon
	_	0	
↓	_	_	0
	_	0	0
Max.	0	0	0
	0	_	0
↓	0	0	_
	0	_	
Min.	_		

○:Turn On /点灯 : Turn Off/消灯

Table.1/表1

4.DSP Check

The test program writes the test data into the DSP and reads it from the DSP.

If the test program fail to write or read, the each LEDs(CHORUS,REVERB) are turned on or off according to the content of the error. Shown in Table 2.

Otherwise, it proceed to the next step automatically.

4.DSPチェック

DSPへのテストデータの書き込みおよび読み出し を行います。

書き込み又は読み出しが失敗した場合、表2のよ うにエラーの内容によってそれぞれのLED (CHORUS, REVERB) が点灯又は消灯します。

OKであれば、次のステップへ自動的に進みます。

CHORUS LED	REVERB LED	Error Message
_	_	DSP busy Error
0	_	DSP PRAM Error
_	0	DSP IRAM Error
0	0	DSP FRAM Error

:Turn On /点灯 : Turn Off/消灯

Table.2/表2

5. Output Frequency Response Check

NOTE: Check the Lch(MONO)/Rch jacks and the Lch/Rch cannons(HOT-GND,COLD -GND). If the Lch of the OUTPUT jack is used alone, or the BALANCED OUTPUT SW is set to MONO, the Lch and the Rch signals are mixed internally, but no signals is outputted(because their phase are opposite each other). So, when checking the Lch of the OUTPUT jack, be sure to insert the opened plug into the Rch, and when checking the Lch of the OUTPUT cannon, be sure to set the BALANCED OUTPUT SW to STEREO to obtain the correct waveform.

Set the noise meter to FLAT. The frequency being output will be changed depending on the LED lighting pattern shown in Table 3. Verify the meter readings are -20dBm±1.5dB.

The difference between the Lch and the Rch should be within 2dB.

Press the EFFECTS BYPASS key to proceed to the next step. To return back to the step 3, press the FS-5U being connected to the CHORUS REMOTE.

5.出力f特チェック

注意:Lch(MONO)/RchジャックとLch/Rchキャノン (HOT-GND,COLD-GND)をチェックします。 OUTPUTジャックをLch単体で使用した場合や BALANCED OUTPUT SWが MONO側にセットされている場合は、Lch,Rchの信号は内部でミキシングされますが、信号は出力されません(Lch,Rchの信号の位相が互いに逆のため)。よって、正常な波形を得るためにLch OUTPUTジャクの測定時には必ずRchに空プラグを挿入し、Lch OUTPUTキャノンの測定時にはBALANCED OUTPUT SWをSTEREO側にセットして下さい。

ノイズ・メーターをFLATに切り換えます。LEDの点灯パターンに伴い、表3のように出力される正弦波の周波数が変化するので、それぞれの出力レベルが-20dBm±1.5dBであることを確認します(Lch,Rchのレベル差は2dB以内)。

EFFECTS BYPASSキーを押すと、次のステップに進みます。 CHORUS REMOTEに接続されているFS-5Uを押すと、ステップ3に戻ります。

〇:Turn On /点灯

-: Turn Off/消灯

注意:Lch(MONO)/RchジャックとLch/Rchキャノン

(HOT-GND.COLD-GND) をチェックします。

OUTPUTジャックをLch単体で使用した場合や

BALANCED OUTPUT SWがMONO側にセット

されている場合は、Lch,Rchの信号は内部でミ

キシングされますが、信号は出力されません

(Lch,Rchの信号の位相が互いに逆のため)。よ

って、正常な波形を得るため、Lch OUTPUT

ジャックの測定時には必ずRchに空プラグを

挿入し、Lch OUTPUTキャノンの測定時には

BALANCED OUTPUT SWをSTEREO側にセッ

CHORUS LEDの点滅に合わせて、ミュートのオン・オフ

EFFECTS BYPASSキーを押すと、次のステップに進みま

CHORUS REMOTEに接続されているFS-5Uを押すと、ス

が行なわれるので、出力波形を確認して下さい。

CHORUS LED	REVERB LED	Freqency/周波数
_	_	20Hz
0	-	1kHz
_	0	5kHz
0	0	15kHz

Table.3/表3

6.出力ミュートチェック

トして下さい。

テップ5に戻ります。


6.Output Mute Check

NOTE:Check the Lch(MONO)/Rch jacks and the Lch/Rch cannons(HOT-GND,COLD-GND). If the Lch of the OUTPUT jack is used alone, or the BALANCED OUTPUT SW is set to MONO, the Lch and the Rch signals are mixed internally, but no signals is outputted(because their phase are opposite each other). So, when checking the Lch of the OUTPUT jack, be sure to insert the opened plug into the Rch, and when checking the Lch of the OUTPUT cannon, be sure to set the BALANCED OUTPUT SW to STEREO to obtain the correct waveform.

The muting on and off should correspond to the blinking of the CHORUS LED.

Verify the waveform being output.

Press EFFECT BYPASS key to proceed to the next step. To return back to the step 5, press the FS-5U being connected to the CHORUS REMOTE.

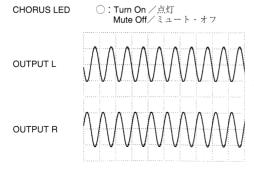

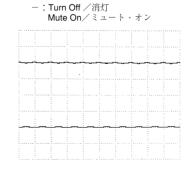


Fig.3/図3 (1mS/DIV, 0.1V/DIV)

7-1a.Residual Noise and Shock Noise Check(DSP Thru)

NOTE:Check the Lch(MONO)/Rch jacks and the Lch/Rch cannons(HOT-GND,COLD-GND). If the Lch of the OUTPUT jack is used alone, or the BALANCED OUTPUT SW is set to MONO, the Lch and the Rch signals are mixed internally, and the correct waveform would not be output. So, when checking the Lch of the OUTPUT jack, be sure to insert the opened plug into the Rch, and when checking the OUTPUT cannon of the Lch, be sure to set the BALANCED OUTPUT SW to STEREO to obtain the correct waveform.

First of all, check the INPUT LEVEL VRs(PIEZO, MAGNETIC) are set to the center and PHASE SW is set to the NOR

Insert the noise meter into the OUTPUT(either Lch or Rch) jack or cannon. Set the meter to IHF-A and verify the noise level is -93dBm or below.

Differences between the Lch and the Rch should be within 2dB.

Check the shock noise, too.

To return back to the step 6, press the FS-5U being connected to the CHORUS REMOTE. Press the EFFECTS BYPASS key to proceed to the next step.

7-1b.AF-AD Check

NOTE:Check the Lch(MONO) and Rch jacks. If the Lch of the OUTPUT jack is used alone, the Lch and the Rch signals are mixed internally, and the correct waveform would not be OUTPUT. So, when checking the Lch oh the OUTPUT jack, be sure to insert the opened plug into the Rch, to obtain the correct waveform.

Check the INPUT LEVEL VRs (PIEZO, MAGNETIC) are set to the center. Input a 200Hz, 50mVp-p square wave to the input jack PIEZO. Insert the noise meter into the OUTPUT (either Lch or Rch) Jack. Set the meter to IHF-A and verify the noise level is -83dBm or below. To return back to the step 7-1a, press the FS-5U being connected to the CHORUS REMOTE.

Press the EFFECTS BYPASS key to proceed to the next step.

7-2.INPUT LEVEL VR and Total Frequency Response Check(DSP Thru)

NOTE:Check the Lch(MONO)/Rch jacks and the Lch/Rch cannons(HOT-GND,COLD-GND). If the Lch of the OUTPUT jack is used alone, or the BALANCED OUTPUT SW is set to MONO, the Lch and the Rch signals are mixed internally, and the correct waveform would not be output. So, when checking the Lch of the OUTPUT jack, be sure to insert the opened plug into the Rch, and when checking the OUTPUT cannon of the Lch, be sure to set the BALANCED OUTPUT SW to STEREO to obtain the correct waveform.

First of all, check the PHASE SW is set to the NOR, and set the INPUT LEVEL VRs(PIEZO, MAGNETIC) to the minimum.

Input a 200Hz, 200mVp-p square wave to the INPUT jack(both of PIEZO and MAGNETIC) by using J-5. Verify the changing of the output waveform corresponding to the direction of the VR when the other one is set to the minimum.

Check the output waveform when the VR is set to

7-1a.残留ノイズ、ショックノイズチェック(DSPスルー)

注意:Lch(MONO)/RchジャックとLch/Rchキャノン (HOT-GND,COLD-GND) をチェックします。 OUTPUTジャックをLch単体で使用した場合や BALANCED OUTPUT SWがMONO側にセットされている場合は、Lch,Rchの信号は内部でミキシングされるため正常な波形が得られません。よって、正常な波形を得るためLch OUTPUTジャックの測定時には必ずRchに空プラグを挿入し、Lch OUTPUTキャノンの測定時にはBALANCED OUTPUT SWをSTEREO側にセットして下さい。

まず、INPUT LEVELボリューム(PIEZO,MAGNETIC)がセンターにセットされ、位相切り替えスイッチがNOR側にセットされている事を確認します。

ノイズ・メーターをOUTPUT(LchまたはRch)ジャック、あるいはキャノンに接続します。メーターをJIS-Aに切り替えて、ノイズ・レベルが-93dBm以下であることを確認して下さい(Lch,Rchのレベル差は2dB以内)。また、ショックノイズも確認してください。

CHORUS REMOTEに接続されているFS-5Uを押すと、ステップ6に戻ります。EFFECTS BYPASSキーを押すと、次のステップへ進みます。

7-1b.AF-ADチェック

注意:Lch(MONO)/Rchジャックをチェックします。 OUTPUTジャックをLch単体で使用した場合 は、Lch,Rchの信号は内部でミキシングされる ため正常な波形が得られません。よって、正 常な波形を得るためLch OUTPUTジャックの 測定時には必ずRchに空プラグを挿入して下 さい。

INPUT LEVELボリューム(PIFZO, MAGNETIC)がセンターにセットされている事を確認します。矩形波200Hz,50mVp-pをPIEZOのINPUTジャックに入力して下さい。ノイズ・メーターをOUTPUT(LchまたはRch)ジャックに接続します。メーターをJIS-Aに切り替えて、ノイズレベルが-83dBm以下であることを確認して下さい。CHORUS REMOTEに接続されているFS-5Uを押すと、ステップ7-1aに戻ります。EFFECTS BYPASSキーを押すと、次のステップに進みます。

7-2.INPUT LEVELボリュームと回路全体のf特チェック(DSPスルー)

注意:Lch(MONO)/RchジャックとLch/Rchキャノン (HOT-GND,COLD-GND) をチェックします。 OUTPUTジャックをLch単体で使用した場合や BALANCED OUTPUT SWがMONO側にセットされている場合は、Lch,Rchの信号は内部でミキシングされるため正常な波形が得られません。よって、正常な波形を得るためLch OUTPUTジャックの測定時には必ずRchに空プラグを挿入し、Lch OUTPUTキャノンの測定時にはBALANCED OUTPUT SWをSTEREO 側にセットして下さい。

まず、位相切り替えスイッチがNOR側にセットされている事を確認し、2つのINPUT LEVELボリューム (PIEZO,MAGNETIC) を最小にします。

矩形波200Hz,200mVp-pをJ-5を使ってPIEZOとMAGNETICの両方のINPUTジャックに入力して下さい。ボリュームの片方を最小にしたまま、もう片方だけを変化させて、出力波形がこれに併せて変化する事を確認します。また、ボリュームの片方が最小で、もう片方がセンターのときのそれぞれの出力

minimum and the other one is set to the center. The waveforms and the levels of the PIEZO and the MAGNETIC will be the same.

To return back to the step 6, press the FS-5U being connected to the CHORUS REMOTE.

波形を確認して下さい (PIEZO側、MAGNETIC側 ともに波形もレベルも同じになる)。 CHORUS REMOTEに接続されているFS-5Uを押す と、ステップ 6 に戻ります。

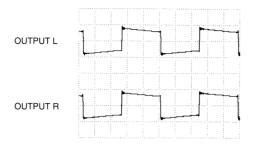


Fig.4/図4 (1mS/DIV, 0.1V/DIV)

7-3.Phase SW Check

NOTE: Check the Lch(MONO)/Rch jacks. If the Lch of the OUTPUT jack is used alone, the Lch and the Rch signals are mixed internally, and the correct waveform would not be output. So, when checking the Lch of the OUTPUT jack, be sure to insert the opened plug into the Rch to obtain the correct waveform.


Set the PHASE SW to the INV and input a 200Hz, 200mVp-p square wave to the INPUT jack(both of PIEZO and MAGNETIC) by using J-5. When the INPUT LEVEL VRs(both of PIEZO and MAGNETIC) are set to around the center, the Output waveforms will disappear. Set the PHASE SW to the NOR, and verify the square wave being output.

To return back to the step 6, press the FS-5U being connected to the CHORUS REMOTE.

7-3.位相切り替えスイッチチェック

注意:Lch(MONO)/Rchジャックをチェックします。 OUTPUTジャックをLch単体で使用した場合 は、Lch,Rchの信号は内部でミキシングされる ため正常な波形が得られません。よって、正 常な波形を得るためLch OUTPUTジャックの 測定時には必ずRchに空プラグを挿入して下 さい。

位相切り替えスイッチをINV側に切り替え、矩形波200Hz,200mVp-pをJ-5を使ってPIEZOとMAGNETICの両方のINPUTジャックに入力して下さい。INPUT LEVELボリューム(PIEZO,MAGNETICの両方)をセンター付近にセットすると、出力波形が消える事を確認します。位相切り替え、知形波が出力される事を確認します。CHORUS REMOTEに接続されているFS-5Uを押すと、ステップ6に戻ります。

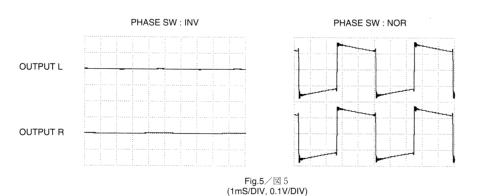

7-4.PEAK LED Check

NOTE: Check the Lch(MONO)/Rch jacks. If the Lch of the OUTPUT jack is used alone, the Lch and the Rch signals are mixed internally, and the correct waveform would not be output. So, when checking the Lch of the OUTPUT jack, be sure to insert the opened plug into the Rch to obtain the correct waveform.


Set the INPUT LEVEL VRs(both of PIEZO and MAGNETIC) to the minimum. Input a 1kHz, 3.5dBm(3.5Vp-p) sin wave to the INPUT jack(either PIEZO or MAGNETIC). If you turn the INPUT LEVEL VR being inputted signals to around the center slowly, PEAK LED will be turned on. At that time, verify the signals are not distorted.

To return back to the step 6, press the FS-5U being connected to the CHORUS REMOTE.

7-4.PEAK LEDチェック

注意:Lch(MONO)/Rchジャックをチェックします。 OUTPUTジャックをLch単体で使用した場合 は、Lch.Rchの信号は内部でミキシングされる ため正常な波形が得られません。よって、正 常な波形を得るためLch OUTPUTジャックの 測定時には必ずRchに空プラグを挿入して下 さい。

INPUT LEVELボリューム(PIEZOとMAGNETICの両方)を最小にします。正弦波1kHz,3.5dBm(3.5Vp-p)をPIEZOまたはMAGNETICのINPUTジャックに入力して下さい。信号が入力されているINPUT LEVELボリュームをセンター付近へゆっくり回すと、PEAK LEDが点灯します。このとき、波形が歪んでいない事を確認して下さい。CHORUS REMOTEに接続されているFS-5Uを押すと、ステップ6に戻ります。

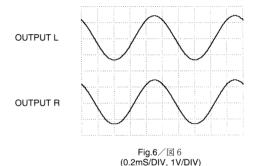

7-5.INSERT Jack Check

NOTE: Check the Lch(MONO)/Rch jacks. If the Lch of the OUTPUT jack is used alone, the Lch and the Rch signals are mixed internally, and the correct waveform would not be output. So, when checking the OUTPUT jack of the Lch, be sure to insert the opened plug into the Rch to obtain the correct waveform.

Connect the stereo plug of the PCS-31 to the INSERT jack. Set the INPUT LEVEL VRs(both of PIEZO and MAGNETIC) to the center. Input a 200Hz, 200mVp-p square wave to the INPUT jack(either PIEZO or MAGNETIC). Verify the signal being output from the mono plug of the PCS-31 connected to the SEND of the INSERT jack. Then, input the same square wave to the RETURN of the INSERT jack. Verify the waveform being output from the OUTPUT jack.

To return back to the step 6, press the FS-5U being connected to the CHORUS REMOTE.

7-5.INSERT Jackチェック

注意:Lch(MONO)/Rchジャックをチェックします。 OUTPUTジャックをLch単体で使用した場合 は、Lch,Rchの信号は内部でミキシングされる ため正常な波形が得られません。よって、正 常な波形を得るためLch OUTPUTジャックの 測定時には必ずRchに空プラグを挿入して下 さい。

PCS-31のSTEREOプラグをINSERTジャックに接続します。INPUT LEVELボリューム(PIEZOとMAGNETICの両方)をセンターにセットします。矩形波200Hz,200mVp-pをPIEZOまたはMAGNETICのINPUTジャックに入力して下さい。INSERTジャックのSENDに接続されているPCS-31のMONOプラグから出力される信号を確認して下さい。そして、同じ矩形波をINSERTジャックのRETURNに入力してください。OUTPUTジャックから出力される波形を確認して下さい。

CHORUS REMOTEに接続されているFS-5Uを押すと、ステップ6に戻ります。

ERROR MESSAGES /エラー・メッセージとその内容

If an error messages is displayed in TEST MODE, take the necessary to remove the cause discribed below.

Error Message	Possible cause
DSP busy Error	Solder bridge or improper soldering at portion anywhere between CPU(IC9) and DSP(IC12). CPU(IC9) and/or DSP(IC12) defective.
DSP PRAM Error	Solder bridge or improper soldering around DSP(IC12). DSP(IC12) defective.
DSP IRAM Error	Solder bridge or improper soldering around DSP(IC12). DSP(IC12) defective.
DSP ERAM Error	Solder bridge or improer soldering at portion anywhere between DSP(IC12) and DRAM(IC13). DSP(IC12) or DRAM(IC13) defective.

テスト・モードでのエラー・メッセージとその不良内容、主な原 因について説明します。

Error Message	主な原因
DSP busy Error	• CPU (IC9) -DSP (IC12) 間の半田タッチ、半田付け不良。 • CPU (IC9) または DSP (IC12) の不良。
DSP PRAM Error	DSP (IC12) 周辺の半田タッチ、半田付け不良。DSP (IC12) の不良。
DSP IRAM Error	DSP (IC12) 周辺の半田タッチ、半田付け不良。DSP (IC12) の不良。
DSP ERAM Error	• DSP (IC12) - DRAM (IC13) 間の半田 タッチ、半田付け不良。 • DSP (IC12) または DRAM (IC13) の 不良。

IDENTIFYING VERSION NUMBER /バージョンの確認方法

- 1. Turn the power off.
- 2. Set all the knobs to the minimum. While pressing the EFFECTS BYPASS key, turn the power on. Next, turn the BODY knob to the maximum, so the version number is represented by some LEDs as shown below. The EFFECT BYPASS LED, the CHORUS LED and the REVERB LED each show digits. the number of flashing the PEAK LED shows the figure.

Example : For Ver. 1.00

- (1) The EFFECT BYPASS LED is turned on. The PEAK LED is turned on and off once. (2) The CHORUS LED is turned on. The PEAK LED isn't turned on. (3) The REVERB LED is turned on. 0
- 3. Turn the power off to exit this mode.


The PEAK LED isn't turned on.

- 1. 電源をオフにします。
- 2. すべてのツマミを最小にします。EFFECTS BYPASSキーを押 しながら電源をオンにします。そしてBODYツマミを最大にす ると、LEDを使ったバージョン表示が行われます。EFFECT BYPASS, CHORUS, REVERB LEDが桁を表し、PEAK LEDの点 滅回転数が数を表します。

例:Ver. 1.00

- (1) EFFECT BYPASS LEDが点灯します。 PEAK LEDが1回点滅します。 (2) CHORUS LEDが点灯します。 0 PEAK LEDは点灯しません。
- (3) REVERB LEDが点灯します。 PEAK LEDは点灯しません。
- 3. 電源をオフにすると、このモードから抜けます。


IC DATA/ICデータ

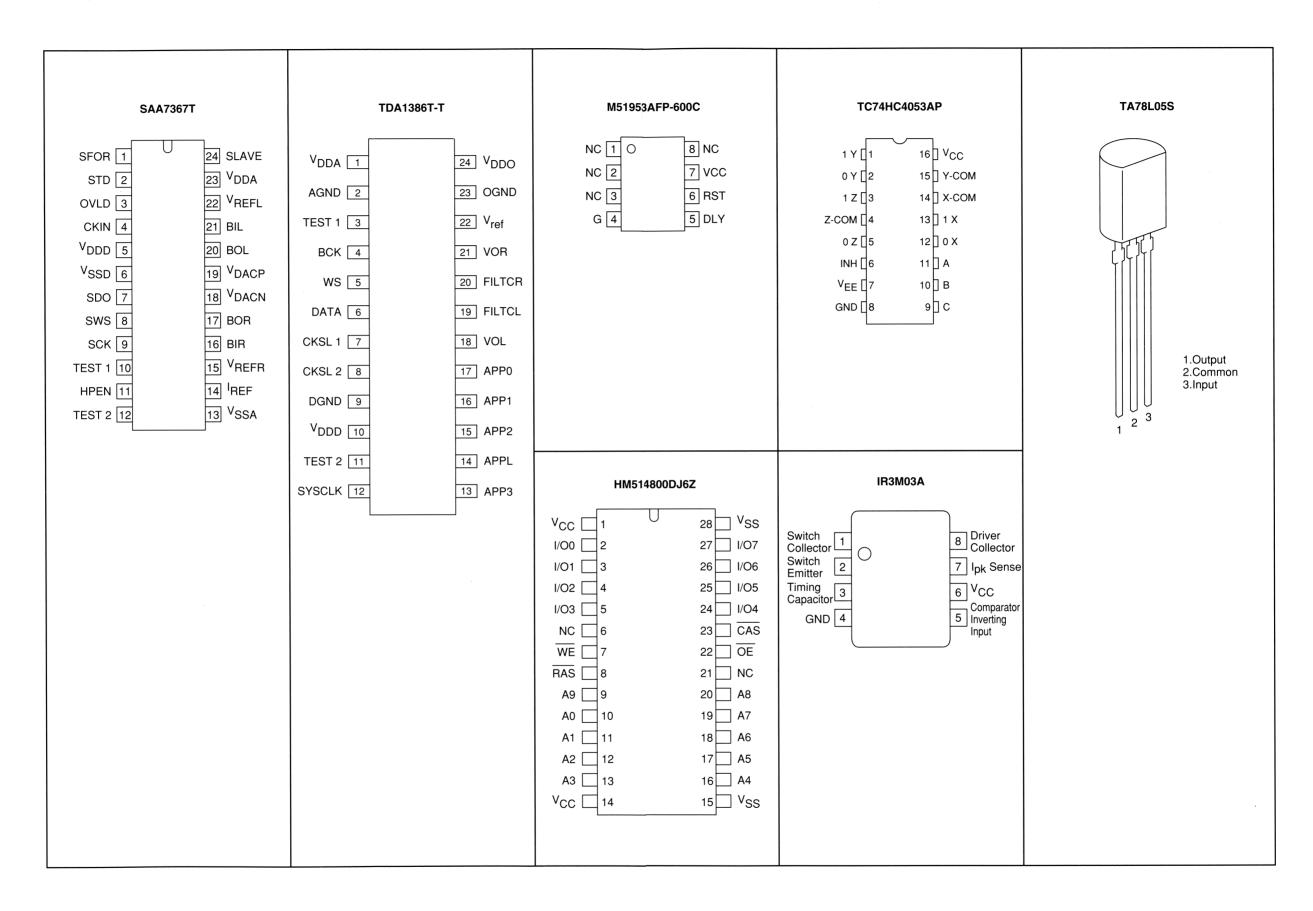


1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 2

A PWB/基板図

EMAIN BOARD ASS'Y

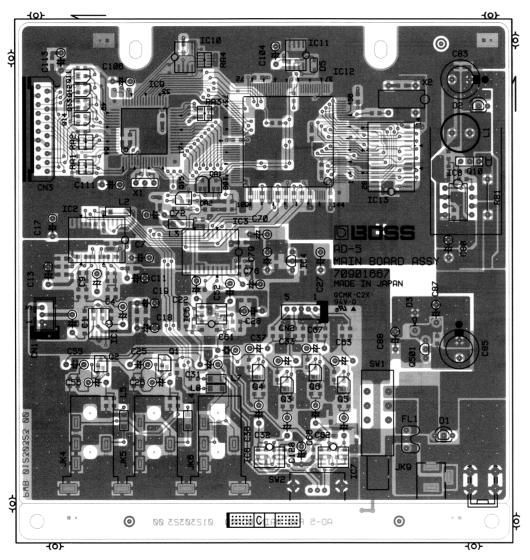



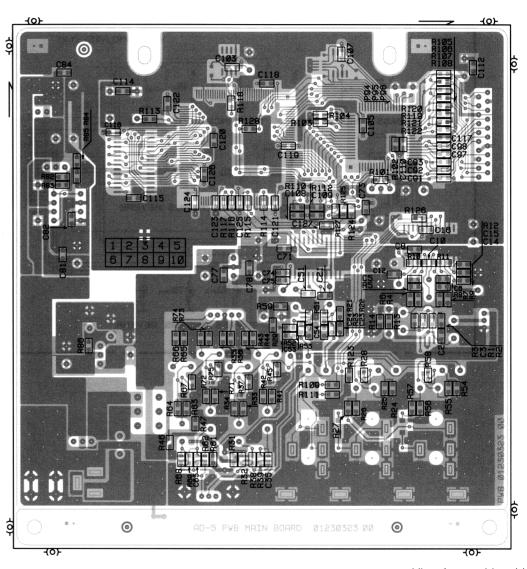

View from solder side

Q

12

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28

A CIRCUIT DIAGRAM/回路図


VR BOARD ASSY (1/2) MAIN BOARD ASSY (1/2) R105 R106 R107 ₹ 1.5k I LEVEL BASS MIDDLE TREBLE PRESENCE DEPTH FREQ BODY MIC CHORUS REVERB DISTANCE REMOTE BYPASS POWER PEAK BYPASS CHORUS REVERB (TIP:CHORUS) (RING:REVERB)

NAME	CODE
AD-5 MAIN BOARD ASSY (1/2)	70901667
AD-5 VR BOARD ASSY (1/2)	70901678


1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28

A PWB/基板図

VR BOARD ASS'Y
IN JK BOARD ASS'Y
OUT JK BOARD ASS'Y

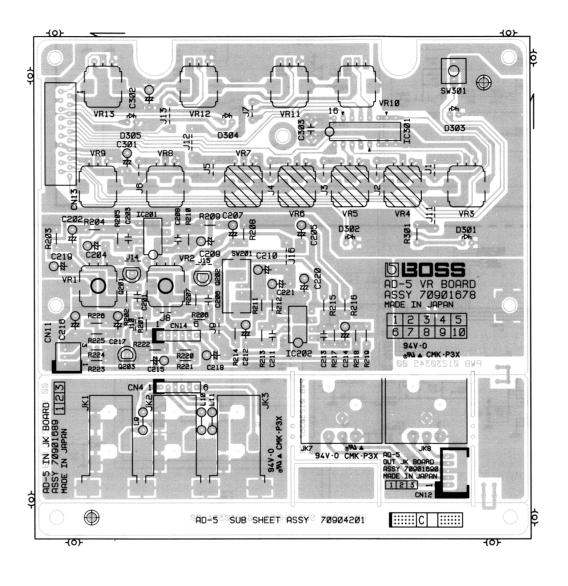

A CIRCUIT DIAGRAM/回路図

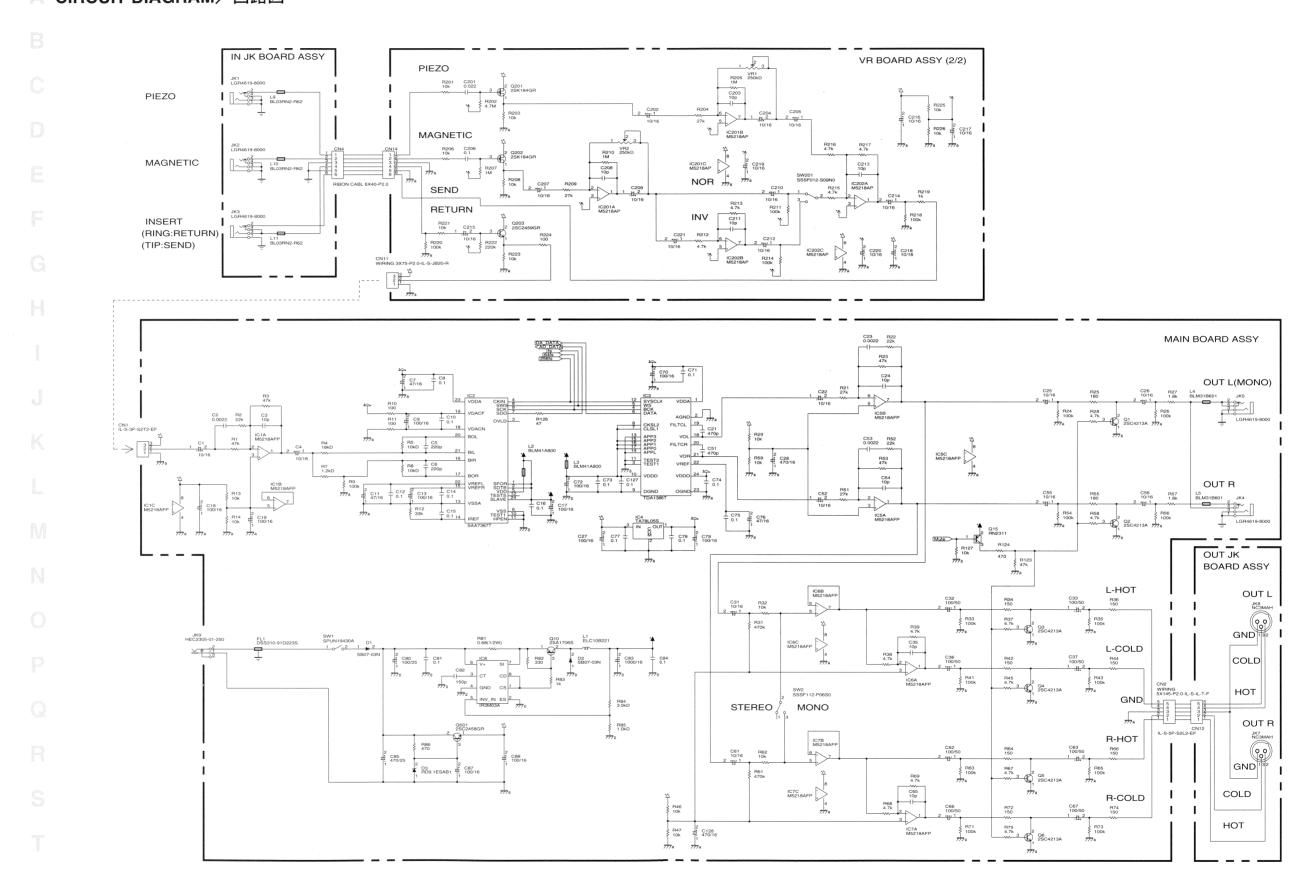

■Roland®

17059870

UPC 17059870

0 30 5 5